

SHORT FORM COMMAND LIST

Copy

(PW) = PASSWORD

AUTOPATCH

Access (access password) (phone number) *
 Access Password (PW) 23 (new access password) *
 Call Counter
 Clear the Counter (PW) 69 *
 Send Count (PW) 86 *
 Call Types (PW) 60 (list 0-7/none=OFF) *
 Dialing Message (PW) 66 (message) *
 Dialing Mode (PW) 61 (1=10 PPS/2=20 PPS/3=DTMF) *
 Dialing Option (PW) 63 (1=mixed mode/none=OFF) *
 Dump (PW) 83 *
 Macros
 Access-Triggered (PW) 26 12 (macro name) *
 Dump-Triggered (PW) 26 13 (macro name) *
 Privacy (PW) 74 (0=OFF/1=ON) *
 Redial
 Redial Last Number (PW) 84 *
 Clear the Redialer (PW) 85 *
 Restrictions
 Clear All Accepted No's. (PW) 68 *
 Enter an Accepted No. (PW) 68 (phone number) *
 Clear All Rejected No's. (PW) 67 *
 Enter a Rejected No. (PW) 67 (phone number) *
 Reverse Patch
 Trigger (PW) 87 *
 Answer (PW) 88 *
 Timeout Timer
 Reset Timer (PW) 81 *
 Time Limit (PW) 65 (0.5-9.9 min/00=infinity) *
 Warning Message (PW) 62 (message) *

CLOCK

Correction (PW) 19 (00-59 sec, 0=slower/1=faster) *
 Send Time or Date (PW) 14 (1=12 hr time/2=24 hr time/3=date) *
 Set Time and Date (PW) 18 (hours,minutes,month,day) *

CTCSS

Encoder Disable (PW) 03 *
 Encoder Enable (PW) 02 *
 Encoder Frequency (PW) 05 (frequency number, 1-37) *

CW

Disable/Enable (PW) 04 (0=disable/1=enable) *
 Frequency of Beep 1 (PW) 07 (tone code) *
 Frequency of Beep 2 (PW) 08 (tone code) *
 Frequency of Beep 3 (PW) 09 (tone code) *
 Frequency of CW (PW) 06 (tone code) *
 Send CW Message (PW) 15 (message) *
 Send Next Message Slowly (PW) 11 *
 Speed Select - Normal Rate (PW) 12 (0-9 = 5-40 WPM) *

